

PROSONIC

English manual page 2-9
Dansk brugervejledning side 10-17

PROSONIC |  Google TV

Streaming Box 4K



Quick Reference Guide

Please read the user manual before operating the device

Safety Instructions



WARNING!

- Presence of live parts inside the device! Do not open. Risk of electric shock!
- No parts should be repaired by users.
- Place the device on a flat, firm and stable surface. Do not put it on a carpet or rug.
- Place the device in a well-ventilated location to prevent the accumulation of internal heat.
- Protect the device from high temperatures, humidity, water and dust.
- Do not place any objects near your device that may damage it (e.g. liquid-filled objects or candles).
- Do not mix old and new batteries and Do not mix alkaline, standard (carbon-zinc) or rechargeable (ni-cd, ni-mh, etc.) batteries.
- Operating Temperature: 0°C~40°C.

Risks of explosion if the battery is replaced by an incorrect type:


- Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types).
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.

Accessory List


Please open the package and check the following accessories:




Streaming Box 4K x1

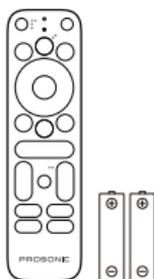

Remote Control x1
Battery x2

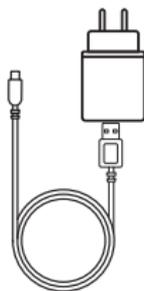

Power Adapter x1

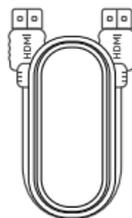


HDMI Cable x1




User Manual x2

Hardware Structure

Front Panel

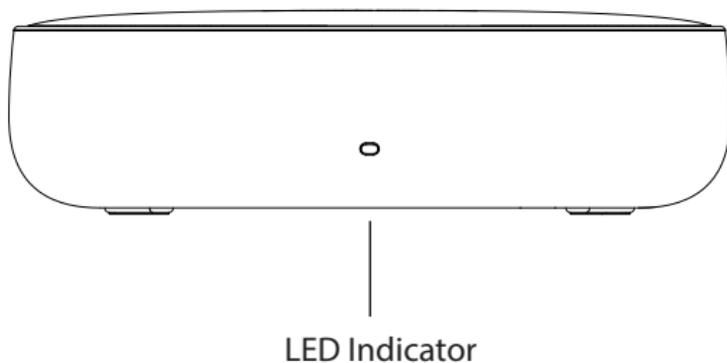


BackPanel

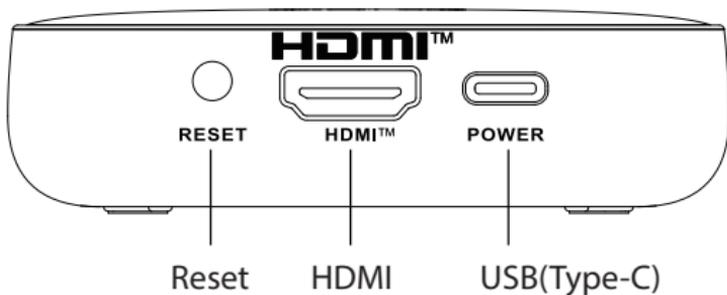

*Note: The pictures are only for reference.

Remote Control

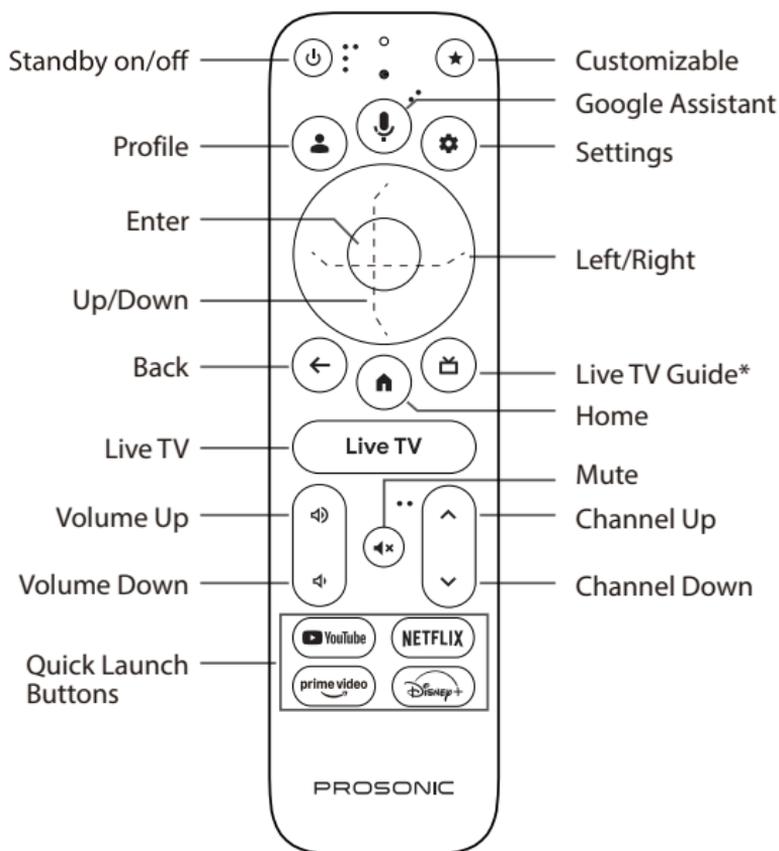


Instructions

- **Indicator Light:** Press any key and the indicator light will flash. When the voltage is low, the indicator will flash rapidly.
- **Bluetooth Pairing:** Press and hold the "Home" and "Back" buttons on the remote control for 10 seconds to enter Bluetooth pairing mode.
- **Google Assistant:** Press the Google Assistant button and use your voice to find what's on now, change channels, control your TV, open apps, and more.
- **Live Guide*:** Press the Live Guide button to create shortcut for your favorite app.

System Connection

Please refer to the below instructions to connect TV, Power, Network and other devices.

Note: Please turn off all equipment before connecting.

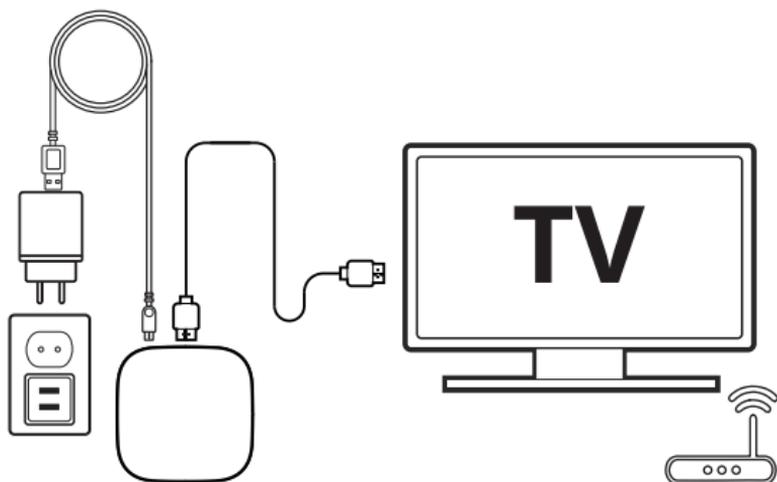

Step1: Connection

Connect the device to the TV with the HDMI cable. Connect the power adapter.

Step2: Network

Select your Wi-Fi network and key in the password.

After completing all the setup steps, you can turn on/off Wi-Fi through the following path: Home > Settings > Network & Internet > Wi-Fi On/Off.

Step3: Setup

Follow the on screen instructions to set up your device.

Troubleshooting

- **No display after power on?**

Make sure your device and TV are powered and turned on.
Check the HDMI cable is securely connected and that the TV is set to the correct HDMI input.

- **TV has images but no sound?**

Make sure the TV is not muted and the volume is turned up.
Open the A/V settings menu and select the correct sound output channel and language.

- **Fail to connect to the network?**

Make sure your Wi-Fi connection is working properly.
Ensure the device has a strong signal from your router.

- **Remote Control Failure?**

Replace the remote control batteries with new ones.
Re-pair the remote by holding the reset button on the back of the device for more than 3 seconds.

- **Please use our accessories to avoid any risk.**

Compliance

Google TV is the name of this device's software experience and a trademark of Google LLC. Google and YouTube are trademarks of Google LLC.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Netflix is a trademark of Netflix, Inc.

All brands contained herein are trademarks of their respective owners.

Frequency range

Bluetooth technology uses the 2.4 GHz ISM spectrum band (2400MHz to 2483.5 MHz)

Operation Frequency band:

Bluetooth: 2402MHz~2480MHz

2.4GHz Wi-Fi: 2412MHz~2472 MHz

Wi-Fi 5GHz: 5150MHz~5250 MHz, 5250 MHz~5350 MHz,
5470MHz~5725MHz, 5725MHz~5850MHz

RF Effective Isotropic Radiated Power, EIRP:

2.4GHz Wi-Fi: EIRP<20dBm

Bluetooth: EIRP<20dBm

Wi-Fi 5GHz: 5150-5250MHz: EIRP<23dBm

5250-5350MHz: EIRP<20dBm

5470-5725MHz: EIRP<20dBm

5725-5850MHz: EIRP<13.98dBm

This device complies with relevant RF radiation exposure limits when positioned at least 20 cm away from your body.

The WLAN function for this device is restricted to indoor use only when operating in the 5150 to 5350 MHz frequency range.

	AT	BE	BG	CH	CY	CZ	DK	DE	EE	EL	ES	FI
	FR	HR	HU	IE	IS	IT	LI	LT	LU	LV	MT	NL
	NO	PL	PT	RO	SE	SI	SK	TR	UK(NI)			

	UK
--	----



This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive

2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment. User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

Manufacturer Model & Information

Model Number: SGC4K

Model Name: Streaming Box 4K

Company Name: Salling Group A/S

Address: Rosbjergvej 33, DK-8220 Brabrand

Importer Information

Company: NSI Electronic ApS

Address: Delta 1, DK-8382 Hinnerup

PROSONIC

 Google TV

Streaming Box 4K



Manual

Læs venligst manualen, før enheden tages i brug

Sikkerhedsinstruktioner



ADVARSEL

- Der er spændingsførende dele i boxen - må ikke åbnes! Fare for støv
- Brugeren må ikke selv reparere nogen dele
- Placer enheden på en flad, fast og stabil overflade. Bør ikke stilles på et gulvtæppe eller en måtte
- Placer enheden et godt ventileret sted for at forhindre ophobning af indvendig varme
- Beskyt enheden mod høje temperaturer, fugt, vand og støv
- Stil ikke genstande i nærheden af din enhed, som kan beskadige den (f.eks. væskefyldte genstande eller stearinlys)
- Bland ikke gamle og nye batterier, og bland ikke alkaline-, standard- (kul-zink) eller genopladelige (ni-cd, ni-mh osv.) batterier
- Driftstemperatur 0°C~40°C.

Fare for eksplosion, hvis batteriet udskiftes med en forkert type:


- Udskiftning af et batteri med en forkert type, hvilket kan tilsidesætte en sikkerhedsforanstaltning (f.eks. i tilfælde af visse typer litumbatterier)
- Bortskaffelse af et batteri i ild eller en varm ovn, eller mekanisk knusning eller skæring af et batteri, kan resultere i en eksplosion
- Hvis et batteri efterlades i omgivelser med ekstremt høj temperatur, hvilket kan resultere i en eksplosion eller lækage af brændbar væske eller gas
- Et batteri, der udsættes for ekstremt lavt lufttryk, hvilket kan resultere i en eksplosion eller lækage af brændbar væske eller gas
- Fare for eksplosion, hvis batteriet udskiftes med en forkert type. Bortskaf brugte batterier i henhold til anvisningerne

Tilbehørsoversigt


Åbn venligst pakken og kontroller følgende tilbehør:




Streaming Box 4K x1

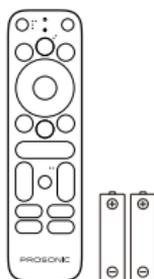

Fjernbetjening x1
Batteri x2

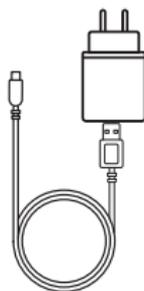

Power Adapter x1

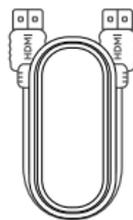


HDMI kabel x1




Manual x2

Hardware oversigt

Frontpanel

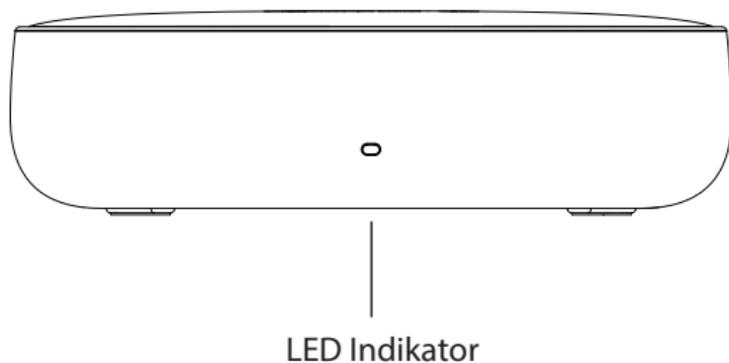


Bagsidepanel

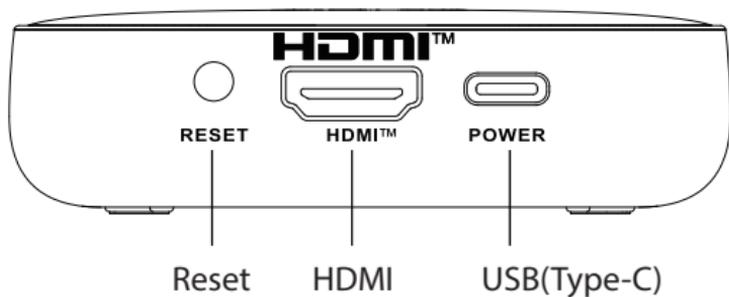

Bemærk: Billederne er kun til reference

Fjernbetjening

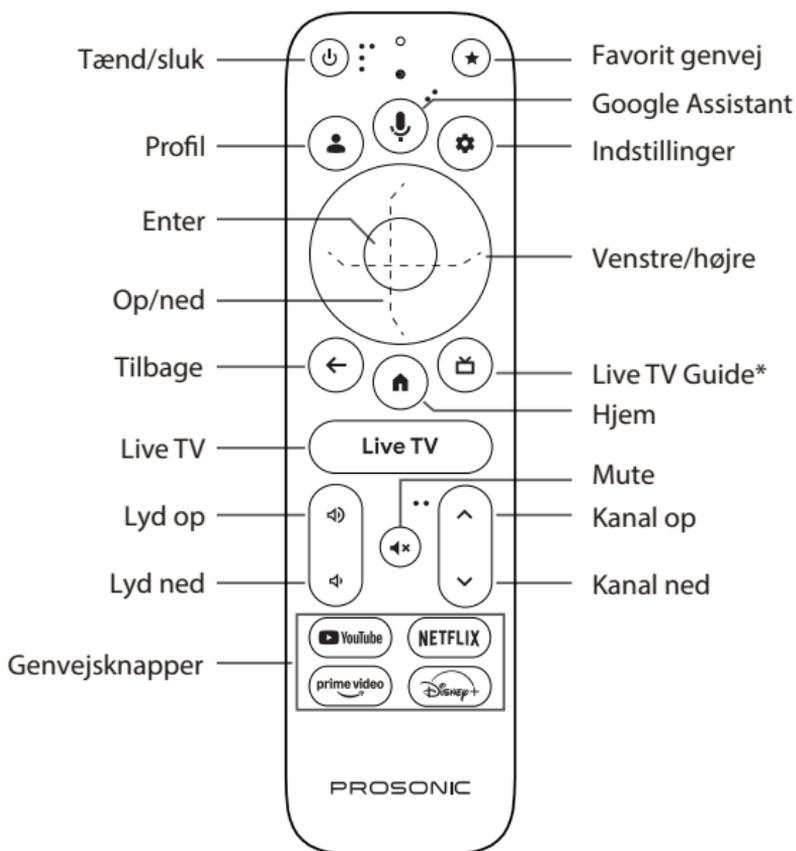


Instruktioner

- **Indikatorlys:** Tryk på en vilkårlig tast, og indikatorlampen vil blinke. Når spændingen er lav, vil indikatoren blinke hurtigt
- **Bluetooth-parring:** Tryk og hold knapperne "Hjem" og "Tilbage" på fjernbetjeningen nede i 10 sekunder for at gå ind i Bluetooth-parringstilstand
- **Google Assistant:** Tryk på Google Assistant-knappen, og brug din stemme til at finde, hvad der vises nu, skifte kanal, styre dit TV, åbne apps og meget mere
- **Live TV & Live TV Guide*:** Tryk på knappen "Live Guide" for at oprette en genvej til din favoritapp

Tilslutning

Se venligst nedenstående anvisninger for at tilslutte TV, strøm, netværk og andre enheder

OBS: Sluk alle enheder før tilslutning

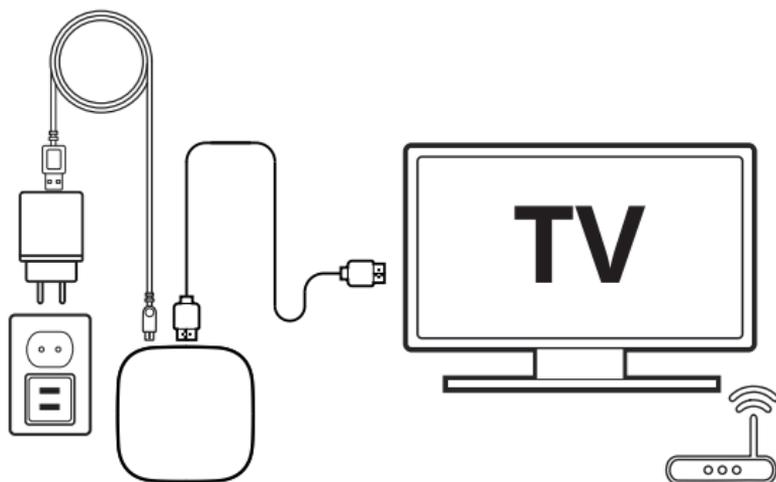

Trin 1: Tilslutning

Tilslut enheden til TV'et med HDMI-kablet. Tilslut strømadapteren

Trin 2: Netværk

Vælg dit Wi-Fi-netværk, og indtast adgangskoden.

Når du har gennemført alle opsætnings trin, kan du slå Wi-Fi til/fra via følgende sti: Hjem > Indstillinger > Netværk og internet > Wi-Fi til/fra.

Trin 3: Opsætning

Følg vejledningen på skærmen for at konfigurere din enhed.

Fejlfinding

- **Intet billede (display) efter opstart?**

Sørg for, at din enhed og dit TV er tilsluttet strøm og tændt. Kontroller, at HDMI-kablet er korrekt tilsluttet, og at TV'et er indstillet til den rigtige HDMI-indgang

- **TV viser billede men ingen lyd?**

Sørg for, at lyden på TV'et ikke er slået fra (mute), og at lydstyrken er skruet op. Åbn menuen for A/V-indstillinger, og vælg den korrekte lydudgangskanal og sprog

- **Fejl ved tilslutning til netværk?**

Sørg for, at din Wi-Fi-forbindelse fungerer korrekt. Kontroller, at enheden har et stærkt signal fra din router

- **Fjernbetjeningen virker ikke?**

Udskift batterierne i fjernbetjeningen med nye. Par fjernbetjeningen igen ved at holde reset-knappen på bagsiden af enheden nede i mere end 3 sekunder.

- **Brug venligst vores tilbehør for at undgå fejl**

Compliance

Google TV er navnet på softwareoplevelsen på denne enhed og et varemærke tilhørende Google LLC. Google og YouTube er varemærker tilhørende Google LLC.

Dolby Audio

Fremstillet under licens fra Dolby Laboratories. Dolby, Dolby Audio og dobbelt D-symbolet er registrerede varemærker tilhørende Dolby Laboratories Licensing Corporation.

HDMITM HIGH-DEFINITION MULTIMEDIA INTERFACE

Termerne HDMI, HDMI High-Definition Multimedia Interface, HDMI-varedesign og HDMI-logoerne er varemærker eller registrerede varemærker tilhørende HDMI Licensing Administrator, Inc.

Netflix is a trademark of Netflix, Inc.

All brands contained herein are trademarks of their respective owners.

Frekvensområde

Bluetooth-teknologi bruger 2,4 GHz ISM-spektrumbåndet (2400 MHz til 2483,5 MHz)

Frekvensområde:

Bluetooth: 2402MHz~2480MHz

2.4GHz Wi-Fi: 2412MHz~2472 MHz

Wi-Fi 5GHz: 5150MHz~5250 MHz, 5250 MHz~5350 MHz,
5470MHz~5725MHz, 5725MHz~5850MHz

RF Effektiv isotropisk udstrålet effekt (EIRP)

2.4GHz Wi-Fi: EIRP<20dBm

Bluetooth: EIRP<20dBm

Wi-Fi 5GHz: 5150-5250MHz: EIRP<23dBm

5250-5350MHz: EIRP<20dBm

5470-5725MHz: EIRP<20dBm

5725-5850MHz: EIRP<13.98dBm

Denne enhed overholder de relevante grænser for RF-strålingseksponering, når den er placeret mindst 20 cm væk fra kroppen.

WLAN-funktionen for denne enhed er kun begrænset til indendørs brug, når den fungerer i frekvensområdet 5150 til 5350 MHz.

	AT	BE	BG	CH	CY	CZ	DK	DE	EE	EL	ES	FI
	FR	HR	HU	IE	IS	IT	LI	LT	LU	LV	MT	NL
	NO	PL	PT	RO	SE	SI	SK	TR	UK(NI)			
												DK



Dette produkt bærer symbolet for selektiv sortering for affald af elektrisk og elektronisk udstyr (WEEE). Dette betyder, at dette produkt skal håndteres i overensstemmelse med det europæiske direktiv

Dette betyder, at produkt skal håndteres i overensstemmelse med det europæiske direktiv 2012/19/EU for at blive genbrugt eller adskilt og dermed minimere dets indvirkning på miljøet. Brugeren har valget mellem at aflevere sit produkt til en kompetent genbrugsorganisation eller til forhandleren, når vedkommende køber et nyt elektrisk eller elektronisk udstyr.

Producent, model og information

Producentens modelnummer: SGC4K

Producentens modelnavn: Streaming Box 4K

Firmanavn: Salling Group A/S

Adresse: Rosbjergvej 33, DK-8220 Brabrand

Importøroplysninger

Firmanavn: NSI Electronic ApS

Adresse: Delta 1, DK-8382 Hinnerup